



HV301

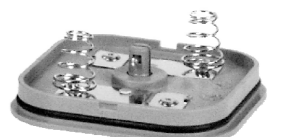

Bedienungsanleitung
User Guide
Manuel d'utilisation
Manuale d'uso
Manual de funcionamiento
Gebruiksaanwijzing
Operatörshandbok
Brugermanual
Guia do Usuário
Bruksanvisning
Käyttäjän opas
Οδηγός χρήστη (ΟΔΗΓΟΣ ΧΡΗΣΤΗ)
Kullanici Rehberi

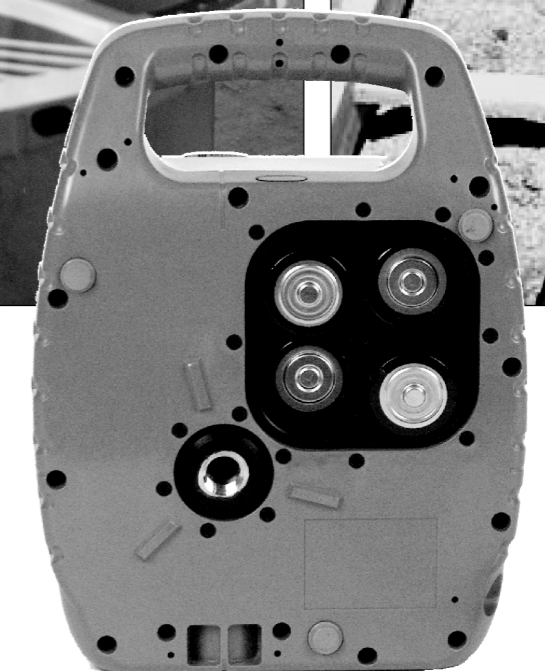

Trimble Construction
Instruments Division
5475 Kellenburger Road,
Dayton, Ohio 45424-1099,
U.S.A.

+1-937-233-8921 Phone

www.trimble.com

www.trimble.com



TABLE OF CONTENTS



FOR YOUR SAFETY	12
Important Information	12
COMPONENTS	13
SETTING TO WORK	13
Rotation mode	13
Pointing mode	13
Line/scanning mode	14
Self-leveling and Height Change alert	14
LEVELING ACCURACY	14
Influences on Leveling Accuracy	14
Accuracy Check	14
OPERATING EXAMPLES	15
Marking Heights	15
Adjusting in Parallel	16
Right Angles/Vertical Mode	16
Transferring marks to the Ceiling - Plumb Point	16
POWER SUPPLY	17
Installing Batteries	17
Operating Time	17
Charging	17
PROTECTING THE UNIT	17
CLEANING AND MAINTENANCE	17
PROTECTING THE ENVIRONMENT	17
WARRANTY	18
TECHNICAL DATA	18

FOR YOUR SAFETY



**LASER RADIATION
AVOID DIRECT EYE
EXPOSURE
CLASS 3R LASER PRODUCT**

- Do not remove warning labels from the unit.
- The laser is subject to class 3R (< 5mW, 600 ... 680 nm).
- **Never** look into the laser beam or direct it to the eyes of other people.
- Always operate the unit in a way that prevents the beam from getting into people's eyes.

Important Information

- Always mark in the center of the laser beam
- Always place the laser in the middle of the working area
- Tripod/wallmount operation is recommended for distances over 65 feet (20 m)
- Check the accuracy regularly
- Stable mounting is necessary for secure operations
- Keep the glass of the instrument clean

COMPONENTS

Buttons

- 1 Power button
- 2 Scan size button
- 3 Speed and Rotation button
- 4 Down arrow button
- 5 Up arrow button

Control indicators

- 6 Leveling Indicator
- 7 Manual/Warning Indicator
- 8 Battery Indicator
- 9 Infrared-receiver for remote control

Elements of the unit

- 10 Beam aperture/prism cap
- 11 Elastic rubber boot
- 12 Handle
- 13 Center Marks
- 14 Battery door
- 15 5/8x 11 Tripod Mounts
- 16 Rubber feet

SETTING TO WORK

Before using the unit for the first time, install alkaline or rechargeable batteries. Charge rechargeable batteries. See battery section.

Position the unit horizontally or vertically (tripod mount and rubberfeet downward!) on a stable platform, wallmount or tripod at the desired elevation. The unit recognizes automatically whether it is used horizontally or vertically when switched on.

Press the power button **1** to turn on the unit. Self-leveling will start at once. In order to switch the unit off, press the power button again. The unit is leveled when the leveling indicator **6** is no longer flashing (once every second). The rotor will not spin until the unit is leveled. For the first five minutes after the laser self levels, the LED lights solid then flashes every four seconds to let you know the laser is still level.

After turning on the unit and after self-leveling, the unit starts with the last chosen mode. Using "set and forget" during self-leveling after turning on the unit, the scan size and position, and rotation speed can be chosen while the laser beam will be emitted.

If the unit is positioned beyond its self-leveling range of $\pm 8\%$, the laser and leveling indicators will recurrently flash quickly four times. Turn the unit off, reposition the laser within the self-leveling range and turn it on again.

Rotation mode

By pressing the speed/rotation button **3** the unit is set into rotation mode. Line mode is stopped.

Pressing the button again, rotation speed will toggle through 600, 200, 80, 10 and 0 min^{-1} . At 10 rpm a small laser line will increase visibility of the rotating beam.



When pressing the buttons on the keypad, the unit may temporarily become out of level due to its high accuracy. The motor will not rotate until it has self-leveled again.

Select the highest rotation speed (600 rpm) for use with an electronic detector.

Pointing mode

When using the pointing mode, the **laser visibility will be at its highest** because the entire laser energy is focused on one point. Turn the prism by hand or press the arrow buttons **4** and **5** on the keypad to the desired position.

During **horizontal operation**, by pressing the arrow buttons, the prism is moved **gradually** counterclockwise or clockwise (360°).

During **vertical operation**, the laser point may be positioned precisely or may be adjusted parallel right- or leftwards on a $\pm 8\%$ range.

By pressing and holding the buttons, the movement of the point will be accelerated.

Line/scanning mode

By pressing and releasing the scan size button **2**, the unit is set to scan mode. Rotation mode is stopped.

The unit starts at an opening angle of 8 degrees. Pressing the button again increases the angle to 45, 90 and 180 degrees.

By pressing and holding the scan size button **2** a programmable scan zone can be created by turning the prism manually from the desired start-to the desired end-point. After releasing button **2**, the created line will be performed at actual speed.

By pressing the arrow buttons **4** and **5** the scan zone may be moved clockwise or counterclockwise. By pressing and holding the buttons, the movement will be accelerated.



When pressing the buttons on the keypad, the unit may temporarily become out of level due to its high accuracy.

Manual mode/Single Slope mode

By pressing the 'M' button on the remote control or the receiver-remote control, the unit is set from automatic self-leveling mode to Manual mode. Manual mode is indicated by the flashing (once every second) red LED **7**. In Manual mode, the Y-axis can be sloped by pressing the Up- and Down-Arrow-buttons on the unit's keypad or the remote control. Additionally, the X-axis can be sloped by pressing the Left- and Right-Arrow-buttons on the remote control.

By pressing the 'M' button again in horizontal operation, the unit is set into Single Slope mode. This is indicated by the flashing red **7** and green **6** LEDs (once every second). In vertical setup, pressing the 'M' button again switches the unit back to automatic self leveling mode. In Single Slope mode, the Y-axis can be sloped by pressing the Up- and Down-Arrow-buttons on the unit's keypad or the remote control, while the X-axis remains in automatic self leveling mode (e.g. when setting up sloped ceilings or drive ways). Operates the unit in Rotation at 600 rpm, the Height change (HI) alert is still active.

Self-leveling, Height change (HI) alert

Once turned on, the unit automatically levels itself in ranges of 8% ($\pm 0,8 \text{ m} / 10 \text{ m}$; $8 \text{ ft}/100\text{ft}$). In order to recognize the leveling process at the measuring area and in order not to mark faulty heights during this operation, the rotation stops.

Once leveled, the unit constantly **monitors** its level condition. The **Height change (HI) alert** is activated 5 minutes after self-leveling was performed and the laser is rotating at 600 min^{-1} .

Level errors **> 30 mm/10 m** (1-1/8inch/10ft) put the unit into **alert mode** because they are generally caused by a disturbance which could lead to inaccurate measurements. When entering into alert mode, the prism stops, the beam turns off, a warning sound is heard and the HI Warning LED **7** flashes 2x per second. Turn the unit off and then on again. To assure your former elevation, now you have to check or arrange the exact height.

LEVELING ACCURACY

Influences on the leveling accuracy

The overall accuracy of the unit can be influenced by many factors:

- factory accuracy;
- temperature of the unit;
- ambient influences like rain, wind and temperature.

The factor which influences on the unit's accuracy most is the ambient temperature. **Vertical differences** in temperature near the ground can divert the laser beam, similar to the heat waves seen on hot asphalt streets.




This factor also applies to all **optical measuring devices** such as automatic levels and theodolites.


Accuracy Check

To ensure job-site accuracy, you need a distance of 20 m (65 feet) between two walls A and B, where you will execute 4 measuring operations on a tripod as follows (transit measurement).

Set the unit horizontally on a tripod near wall A and switch it on with the plus-X-axis pointing towards wall A. After the unit is level, mark the height of the laser spot at the centre of the beam at wall A. Turn the entire unit 180° , let it self-level and mark the center of the laser spot at wall B.

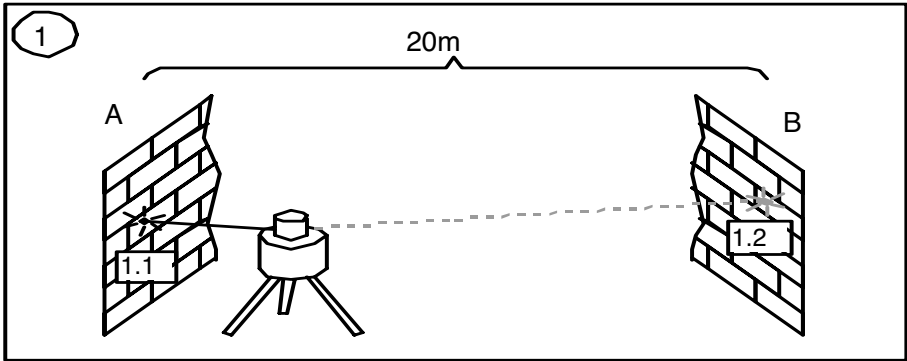

Now, place the unit near wall B with the plus-X-axis pointing towards wall A. After the unit is level, mark the height of the laser spot at the centre of the beam at wall B. Turn the entire unit 180°, let it self-level and mark the center of the laser spot at wall A. The difference (h) of the marked points at wall A shows the deviation.

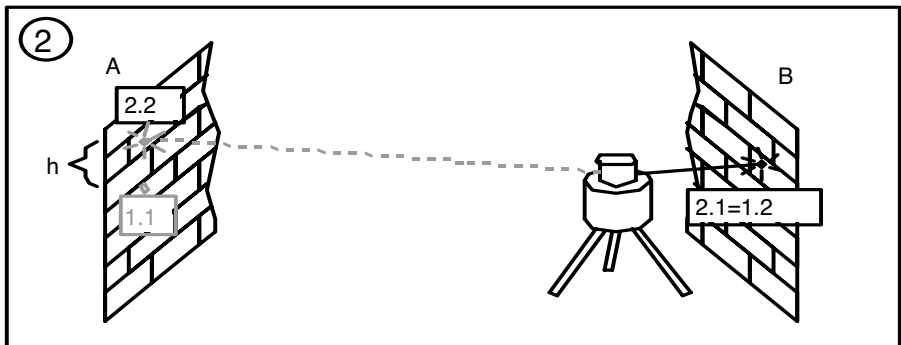

If the unit is within its working accuracy limits ($\pm 30''$), the maximum difference from true level at 20 m (65 ft.) + 20 m (65 ft.) = 40 m (130 ft.) is 6 mm (1/4 inch). The highest and the lowest mark may be up to 12 mm (1/2 inch) apart.

Repeat the above steps for "minus x" and for "plus-" and "minus y", so that a measurement for all four axes of the unit have been performed.

If the visibility of the laser beam is bad, you can use a detector to transfer the heights to the walls. The accuracy of the detector has to be regarded.

OPERATING EXAMPLES

Marking Heights

Put the instrument in horizontal mode (e.g. when using a tripod or wallmount) so that the laser beam is at the desired height. Then either turn the prism manually to the desired area or use one of the rotation modes.

When working without a tripod or wallmount, put the instrument on a stable base and measure the height difference between laser beam and desired height by using a ruler. After turning the prism to the desired area, mark the measured height again.

Adjusting in Parallel

In order to measure irregularities, create right angles, align partitions in right angles or to mark vertical lines, the direct beam (plumb beam) has to be adjusted parallel which means the laser beam has to be placed in the same offset distance to a wall or any other reference line.

Therefore place and align the unit in **vertical mode**, so that the beam runs roughly in parallel to a wall or other reference line. Measure the distance between the beam and the wall near the unit and at a certain distance.

To adjust the beam in parallel, press the line button **4** or **5** to realize the same offset distance at the unit and far away.

The procedure for aligning an **extension joint** is similar. Just position the unit so that the beam runs directly above the joint.



A long reference distance is important for accuracy. Therefore it should be as long as possible.

Right Angles/Vertical Mode

Set up the unit in vertical mode so that the perpendicular beam is **parallel** to a reference line (e.g. a wall). The rotating laser beam is now at a right angle from your original point and as a vertical area available.

The best visibility is reached by using the line mode (e.g. as a perpendicular).

Transferring marks to the Ceiling - Plumb Point

The origin of the laser beam is located directly above the horizontal tripod mount and the height of the vertical tripod mount.


In order to transfer a marked point from the bottom to the ceiling, there are center marks **13** at the lower part of the unit's housing. Using these marks, the unit may be set up with the two axes X and Y above two crossed chalk marks, for example.



For better installation of the unit above a mark on the floor, just mark 2 rectangular lines through this point.

WALL MOUNT M300 (optional)

1. Nail Hole – allows you to hang the wall mount onto a nail or screw.
2. Locking Lever – opens/closes the clamp.
3. Stop Screw - stops the sliding bracket from moving beyond a set point on the wall mount. The screw can be moved so that the center of the beam aligns with the wall molding 0.0 cm (0.0 in.) or (3.1 cm (1 1/4 in.))
4. 5/8" –11 Laser Mount – lets you connect the laser to the wall mount and holds the sliding bracket in place after it has been positioned along the elevation scale.
5. Reading Edge – allows you to adjust the laser position appropriate for your application needs.
6. 5/8"-11 Tripod Mount – lets you connect the wall mount to a standard tripod when using in vertical mode.
7. Elevation Scale – provides graduated marks that indicate the position of the laser relative to the wall-molding height. The adjustment range on the scale is from 3.1 cm (1 1/4 in.) above wall-molding height to 5 cm (2 in.) below it. (The „-2“ position is aligned with the horizontal centerline at the ceiling target.)
8. Lock Nut – lets you adjust the clamping force.
9. Clamp – opens/closes so that the wall mount can be attached to wall molding or floor track.

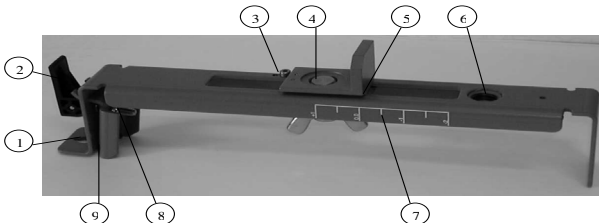

POWER SUPPLY

Installing Batteries

Remove the battery door by turning the centerscrew 90° counterclockwise. Insert batteries (or a rechargeable battery pack) into the housing so that the negative poles are on the **larger battery spiral springs**. Install the battery door and tighten it by turning the centerscrew 90° clockwise.



A mechanical switch prevents alkaline batteries from being charged. Only the original rechargeable battery pack allows charging within the unit. Any other rechargeable batteries have to be charged externally.

Operating Time

Rechargeable batteries permit an operating time of appr. 40 hours in rotation mode.

Alkaline batteries (AlMn) permit an operating time of appr. 30 hours in rotation mode.

The following factors reduce the operating time:

- frequent self-leveling due to wind or vibration;
- extreme temperatures;
- old rechargeable batteries or rechargeable batteries with Memory-effect;
- using batteries of different capacities.



Remove all batteries at the same time, never use batteries with different capacities, only use new (charged) batteries (rechargeable).

Low voltage is indicated by slow flashing of the battery indicator 8.

Charging rechargeable batteries

The charger requires appr. 10 hours to charge empty rechargeable batteries. For this charging, connect the plug of the charger to the recharge jack of the unit. The charging function is indicated by a red display at the charger. New or long time out of use rechargeable batteries reach their best performance after being charged and recharged five times.



The batteries should only be charged when the laser is between 50° and 104°F (10° to 40°C) Charging at a higher temperature may damage the batteries. Charging at a lower temperature may increase the charge time and decrease the charge capacity, resulting in loss of performance and shortened life expectancy.

PROTECTING THE UNIT

Do not expose the unit to extreme temperatures or temperature changes (do not leave inside the car).

The unit is very robust and can resist damage if dropped even from tripod height. Before continuing your work, always check the leveling accuracy. See **Accuracy Check** section.

The laser is water proof and can be used indoors and outdoors.

CLEANING AND MAINTENANCE

Dirt and water on the glass parts of laser or prism will influence beam quality and operating range considerably. Clean with cotton swabs.

Remove dirt on the housing with a lint-free, warm, wet and smooth cloth. Do not use harsh cleansers or solvents. Allow the unit to air dry after cleaning it.

PROTECTING THE ENVIRONMENT

The unit, accessories and packaging ought to be recycled.

This manual is made of non-chlorine recycling paper.

All plastic parts are marked for recycling according to material type.



Do not throw used batteries into the garbage, water or fire. Remove them in compliance with environmental requirements.

WARRANTY

According to legal regulations, the warranty-period for this unit is 12 months for material and manufacturing defaults.

We do not take any liability for damages caused by a non-accurate unit.



Before starting to work, always carry out the **Accuracy Check** according to the corresponding chapter.

This warranty is no longer valid if the unit is opened or the labels are removed.

TECHNICAL DATA

Leveling accuracy ^{1,3} :	≤ ± 1 mm/10m, 1/8" @ 100 ft, 20 arc seconds
Rotation:	4 speed levels appr. 10/80/200/600 rpm
Operational area ^{1,2} :	appr. 100 m (330 feet) radius with detector
Laser type:	red diode laser 635 nm
Laser class:	Class 3R, <5mW
Self-leveling range:	appr. ± 5°
Leveling time:	appr. 30 sec
Leveling indicators:	LED flashes
Laser beam diameter ¹ :	appr. 5 mm
Power supply:	4 x 1.5V Mono cells type D (LR20)
Operating temp.:	23°F...113°F (-5°C ... 45°C)
Storage temp.:	-4°F...158°F (-20°C ... 70°C)
Tripod attachments:	5/8 x 11 horizontally and vertically
Weight:	2.7 kg (5.9 lbs)
Low voltage indication:	flashing/shining of the battery indicator
Low voltage disconnection:	unit shuts off

1) at 21° Celsius

2) under optimal atmospheric circumstances

3) along the axis

DECLARATION OF CONFORMITY

We

Trimble Kaiserslautern GmbH declare under our sole responsibility that the product **HV301** to which this declaration relates is in conformity with the following standards **EN 61000-4-2, 1994; EN 55022, 1994; EN 61000-4-3, 1997** following the provisions of directive Electromagnetic compatibility 89/336/EEC.

The managing director

Electro-Magnetic Compatibility Declaration of Conformity

This digital apparatus does not exceed the Class B Limits for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

This device complies with part 15 off the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: The product been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the product off and on. The user is encouraged to try to eliminate the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- For more information, consult your dealer or an experienced radio/television technician.

Caution: Changes or modifications to the product that are not expressly approved by Trimble could void authority to use the equipment.